



 
 
BT On-Air 1000 Classic and Executive Plus Handset

User Guide







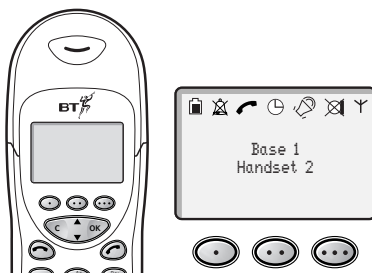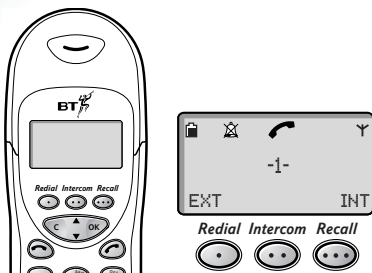

This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

This product is intended for registration to any base in the BT On-Air range. It may also be registered to other GAP compatible bases, with possible limited availability of some features.





Classic and Executive Plus Handset









Classic handset functions

-  **Up/Down.** Lets you move through the options and lists.
-  **Clear.**
-  **OK button.** To confirm settings.
-  **Redphone.** To end a call and turn the power off.
-  **Greenphone.** To answer a call and switch the power on.
-  **Redial button.** Lets you redial up to 20 of the last numbers called.
-  **Intercom.** Enables internal calls and call transfer between handsets.
-  **Recall.** For use with Switchboards and BT Select Services.








Classic handset display icons

-  **Battery.** Shows the status of the handset battery.
-  **Silent mode.** Displayed when the handset ringer has been switched off.
-  **In Use.** Shows that the handset is in use.
-  **In range.** Indicates that you are in range of the base station.
- EXT** **External Call.** Displayed during an external call.
- INT** **Internal (Intercom) Call.** Displayed during a call with another handset (an internal call).

Executive Plus handset functions

-  **Up/Down.** Lets you move through the menu options and list.
-  **Clear.**
-  **OK button.** To confirm settings.
-  **Redphone.** To end a call and turn the power off.
-  **Greenphone.** To answer a call and use the handsfree. Switch the power on.
-  **Option buttons.** Allows you to select an option when a function is displayed on the screen.

Executive Plus handset display icons

-  **Battery.** Shows the status of the handset battery.
-  **Silent mode.** Displayed when the handset ringer has been switched off.
-  **In Use.** Shows that the handset is in use.
-  **Alarm/Timer.** Indicates that alarm/timer has been set.
-  **Handsfree.** Indicates that you are in handsfree mode.
-  **Secrecy.** Press to mute the call so your caller cannot hear you.
-  **In range.** Indicates that you are in range of the base station.

 
How to use this guide



If you are using the BT On-Air Classic handset follow the text in **black**.



If you are using the BT On-Air Executive Plus handset follow the text in **blue**.

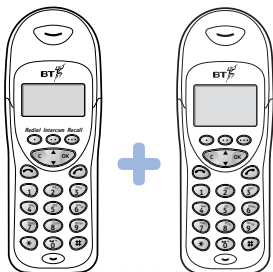

For joint instruction follow the text in **grey**.

In this guide

	Classic	Executive Plus
Introduction	4	4
Unpacking your handset	4	4
For your records	4	4
Safety information	4	4
Setting up	5	5
Registering your handset	7	8
Using additional handsets and bases	7	8
Registering Classic handsets	7	<i>not applicable</i>
Registering Executive Plus handsets	<i>not applicable</i>	8
Registering your handset to a fax	9	9
Using the telephone	11	11
Making and ending calls	11	11
Call timer	11	11
Secrecy	12	12
Redial	12	12
Number memory	13	<i>not applicable</i>
Name and number directory	<i>not applicable</i>	14
Internal calls	15	15
Transferring calls	15	15
Handset settings	16	16
Keyguard	<i>not applicable</i>	16
Economy mode	<i>not applicable</i>	17
Vibrate	<i>not applicable</i>	18
Alarm clock	<i>not applicable</i>	18
Handsfree	<i>not applicable</i>	19
Timer	<i>not applicable</i>	19
General information	20	20
Index	22	22

Please note

This user guide is not comprehensive of your main base station product. For full functionality/features please use in conjunction with your BT On-Air main user guide.

Introduction

Unpacking your BT On-Air Classic and Executive Plus handset

If anything is missing, please contact your place of purchase immediately.

One BT On-Air charger.

One BT On-Air 1000 Classic handset.

or

One BT On-Air 1000 Executive Plus handset.

One NiMH rechargeable battery pack and battery compartment cover.

One handset belt clip.

Three removable fascias.

Self adhesive label.

For your records

Date of purchase:

Place of purchase:

Serial number

For warranty purposes proof of purchase is required so please keep your receipt.

Enter your System Code here.

--	--	--	--

The pre-set System Code number is 0000.

See page 5 and 6 for information on your System Code.

Safety information

General

Only use the power supply included with the product. Using an unauthorised power supply will invalidate your warranty and may damage the telephone. The item number for the mains power supply is 872101.

If Keyguard is active, it is still possible to make emergency calls to 999 and 112.

Do not open the handset or base station. This could expose you to high voltages or other risks. Contact the helpline for all repairs.

Radio signals transmitted between the handset and base may cause interference to hearing aids.

This product should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.

Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals.

Cleaning

Simply clean the handset and base station with a damp (not wet) cloth, or an antistatic wipe. Never use

household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

Environmental

Do not expose to direct sunlight.

The product may heat up when the batteries are being recharged. This is normal. However, we recommend that you do not place the product on antique/veneered wood to avoid damage.

Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing free flow of air over it's surfaces.

Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as in bathrooms.

Do not expose your product to fire, explosive or other hazardous conditions.

There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord for the duration of the storm.

Setting up

Please note that your handset must be registered to the base before use.

 
Plan the location

Situate your product close enough to the mains power sockets so that the cables will reach.

Make sure it is at least 1 metre away from other electrical products to avoid interference.

Do not situate the product in the bathroom or other humid areas.

1 Plug the power adaptor into the wall socket and switch on

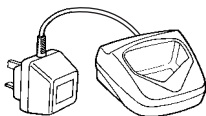


2 Install the battery in the handset and charge them for at least 16 hours


WARNING

Under no circumstances should non-rechargeable batteries be used. Only use the approved batteries. Using unapproved batteries will invalidate your warranty and may damage the telephone.

Fully discharging the batteries at least once a week will help them to last as long as possible. However, the charge capacity of rechargeable batteries will reduce with time as they wear out, so reducing the talk/standby time of the handset. Eventually they will need to be replaced. New batteries can be obtained from any BT Shop or from the helpline on 0845 601 2476.

 
Slide off the battery cover and install the battery. Replace the battery cover.

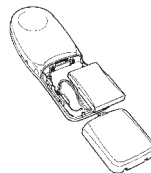

When the battery has been charged for **at least 16 hours** the display will show the  symbol; you can then connect the telephone line cord to the base.

Battery low warning

 If the handset battery symbol is empty and you hear warning beeps, you will need to recharge your handset before you can use it.

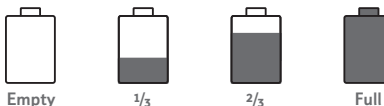

Battery performance

Your handset is supplied with NiMH batteries. These need to be initially charged continuously for 16 hours to reach full charge.

Note that the battery charge icon does not indicate the correct level when the batteries are first installed. The batteries must first be fully charged.

Helpline

If you are experiencing difficulty, please call the BT On-Air Helpline on 0845 601 2476.

3 Changing your handset fascias

There are 3 removeable handset fascias to choose from. Simply slide the fascias off and replace with another.



Using a headset

For 'handsfree' operation and flexibility of your BT On-Air 1000 Executive Plus you can use compatible headsets. For a list of compatible headsets or to purchase one please call the BT On-Air Helpline on **0845 601 2476**

To connect your headset

Plug your compatible headset into the headset socket on the right-handside of the handset.



Note

Only use compatible headsets.

Registering your handset

Using additional handsets and bases

Up to six handsets can be registered and operated from any one base (on fax machines up to four handsets can be registered). This allows you to make internal calls between two handsets while a third is making an external call.

Each handset can also be registered on up to four bases.

Each additional handset you purchase must be registered to a base.


Registering Classic handsets


To register a Classic handset to a base station (if you have not changed System Code from 0000)

At the base:

 Press and hold down the button on the base until it starts to flash.

On the handset:


 Press the **OK** button.

 Press the **6** button.


The handset will now automatically register with the handset number.


To register a Classic handset to a base (if you have changed System Code from 0000)

At the base:


 Press and hold down the button on the base until it starts to flash.


On the handset:

 Press the **OK** button.

 Press the **9** button.

 Use the **UP** or **DOWN** button to select the base number ie. **1234**.

 Press the **OK** button.


 Enter the System Code.


Wait until the available handset numbers appear. ie. **234**. Then press the handset number that you want.

To de-register a Classic handset from the base

Intercom
 Press the **INTERCOM** button.

 Press the **OK** button.
F1 will appear on the display.

 Press the **3** button then the **3** button again.
---- will appear on the display.

 Enter the System Code. All registered handset numbers are displayed.

Enter the number of the handset to be de-registered. **Init = ok6** will appear on the de-registered handset.

 Press the **C** button twice.






Registering Executive Plus handsets

To register an Executive Plus handset to a base station (if you have not changed the System Code from 0000)

At the base:

 Press and hold down the **PAGE** button on the base until it starts to flash.

On the handset:













-  Use the **UP** button to scroll to **Base**.
-  Press **OK** to confirm.
The display will show **Register**.
-  Press **OK** to confirm.
-  Use the **UP** or **DOWN** button to scroll to **Automatic**.
-  Press **OK** to confirm.
The display will show **Searching for base**.

To register an Executive Plus handset to a base station (if you have changed the System Code from 0000)

At the base:

-  Press and hold down the **PAGE** button on the base until it starts to flash.














On the handset:

-  Use the **UP** button to scroll to **Base**.
-  Press **OK** to confirm.
The display will show **Register**.
-  Press **OK** to confirm.
-  Use the **UP** or **DOWN** button to scroll to select **Custom**.
-  Press **OK** to confirm.
-  Use the **UP** or **DOWN** button to scroll to the required base number.
-  Press **OK** to confirm.
At this stage if you require you can edit the base name.
-  Press **OK** to confirm.
-  Enter the System Code using the keypad.
-  Press **OK** to confirm.
The display will now flash **Searching for base**.
You will then see a list of the available handset numbers.
-  Use the **UP** or **DOWN** button to scroll to the number you require.
-  Press **OK** to confirm.

Note

The number you save becomes the handset's name (ie. 'Handset 1').

To de-register an Executive Plus handset from the base

-  Press the **UP** button to scroll to the **Base** menu.
-  Press **OK** to confirm.
-  Use the **UP** or **DOWN** button to scroll to **Base settings**.
-  Press **OK** to confirm.
-  Use the **DOWN** button to scroll to **Handsets**.
-  Press **OK** to confirm.
-  Use the **DOWN** button to scroll to **De-register**.
-  Press **OK** to confirm.
-  Enter the System Code.
-  Press **OK** to confirm.
-  Use the **UP** or **DOWN** button to scroll to the handset that you want to de-register.
Press **OK** to confirm.
-  This will time out and go back to idle.
- Or*
-  Press the **C** button until you get back to idle.
The handset is now de-registered.

Note




When planning to use a handset with more than one base, we recommend that you:

- Give a number to each base (from 1-4).
- Number each handset (from 1-6).
- Register your handset(s) at base 2 (and 3 & 4 if used) using the same internal number as at base 1.





Registering your handset to a BT DECTfax, BT DECTfax Plus or BT On-Air DECTf@x Plus.

The following instructions need to be carried out on your fax machine before you can register your handset.

On your BT DECTFax and BT DECTFax Plus:



-  Press the **OK** or **FUNCTION** button.
-  Press the **8** button twice.
-  Press the **OK** button or **FUNCTION** button.

Or on your BT On-Air DECTf@x Plus:

-  Press the **OK** button.
-  Press the **6** button.
-  Press the **1** button.
-  Press the **OK** button.






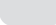 
To register a Classic handset to your DECTfax machine (if you have not changed the System Code from 0000)

On the Classic handset:

-  Press the **OK** button.
-  Press the **6** button.
The handset will now register and take the lowest available handset number.




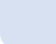 
To register a Classic handset to more than one DECTfax machine or base station (or if you have changed your System Code from 0000)

On the Classic handset:

-  Press the **OK** button.
-  Press the **9** button. The current base ID number will now appear on the display.
-  Use the **UP** or **DOWN** button to select a vacant base position _____.
-  Press the **OK** button.
-  Enter the System Code (default 0000).
-  Wait until the available handset numbers appear, i.e. 1234. Then on the handset keypad press the handset number that you want.

To register an Executive Plus handset to a DECTfax machine (if you have not changed the System Code from 0000)

On the Executive Plus handset:

-  Press the **UP** button to display 6 Base.
 -  Press **OK** to display 61 Register.
 -  Press **OK** to display 611 Automatic (and custom).
 -  Press **OK**.
- The handset will now register and take the lowest available handset number.

To register the Executive Plus handset on more than one DECTfax machine or base station (or if you have changed your System Code from 0000)

On the Executive Plus handset:

 Press the **UP** button to display 6 Base.

 Press **OK** to display 61 Register.


 Press **OK** to display 611 Automatic (and custom).

 Press **DOWN** button to highlight Custom.

 Press **OK**.

 Press **DOWN** button to highlight a vacant base position (1, 2, 3 or 4 _____).

 Press **OK** to display Base name: Base X_____.

 To change the base name press the **C** button to clear the existing name.

ABC Enter the name using the letters on the keypad.

 Press **OK** to display System code: _____

Enter the base code (default 0000).

 Press **OK**.

After a short delay the handset will display the available handset numbers.

 Press **DOWN** button to highlight the handset number you want.

 Press **OK**.

Note

Please refer to your main fax user guide for additional functions.

Using the Classic or Executive Plus Handset

To switch the handset power on and off



Press and hold the **GREEN PHONE** button to switch the handset on.



Press and hold the **RED PHONE** button to switch the handset off.

Making and ending calls

To make an external call



Press the **GREEN PHONE** button. The display shows the  symbol.



Dial the number.

Preparatory dialling

First enter the number to be dialled. The number is shown in the display. (If you make a mistake press **C** to remove the incorrect digit).



If you have entered the number correctly, press the **GREEN PHONE** button to dial the number.

Call timer

Your handset will automatically time the duration of all external calls. The handset display shows the call duration during your call.

To end a call



Press the **RED PHONE** button.

To receive an external call



Press the **GREEN PHONE** button to answer the call.


To adjust the earpiece volume

You can adjust the volume during a call.



Press the  button to increase the volume.



Press the  button to decrease the volume.

The display shows the current volume level.

To adjust the earpiece volume

You can adjust the volume during a call.




Press the  button to increase the volume.



Press the  button to decrease the volume.

The display shows the current volume level.

Note


The  symbol on your handset display indicates when you are in range of the base station. If the symbol disappears you are out of range and will need to move closer to the base station.

Secrecy

When on a call you can talk to someone in the same room, without your caller hearing.

To switch secrecy on/off



During a call, press the **C** button. **C** or  (depending on which handset you are using) will now flash to show it is in operation.



Press the **C** button again to resume your call.

Redial

The redial list can also incorporate incoming calls if you subscribe to BT's Caller Display.

Redial List



Press the **REDIAL** button. This will take you to the most recent number.



Use the **UP** or **DOWN** button to scroll to the number you require.



Press the **GREEN PHONE** button to dial the number.

To delete all numbers shown in the redial list



Press **OK** then **4**, this will delete all numbers in the redial list.



The display will return to the idle state.

Redial list



Press and hold down the **GREEN PHONE** button.



Use the **UP** or **DOWN** button until the number you want is displayed.



Press the **GREEN PHONE** button to dial the number you want.

To delete numbers shown in the redial list

Enter the redial list



Use the **UP** or **DOWN** button until the number you want to delete is displayed.



Press **OK** to confirm.



Use the **UP** and **DOWN** buttons until **Delete** or **Delete all** is displayed.



Press **OK** to confirm.

To copy numbers shown in the redial list to the directory

Enter the redial list.



Use the **UP** or **DOWN** button until the number you want to store in the memory is displayed.



Press **OK** to confirm.



Use the **UP** or **DOWN** button until **Dir store** is displayed.



Press **OK** to confirm.

ABC

Enter the name you want to store with the number by using the keypad.



Press **OK** to confirm.


Number memory


You can store up to 20 of your most frequently used numbers.

To store a number in the memory

- ▲ Press the **UP** or **DOWN** button until the display shows Mem...
- ▼ Use the **DOWN** button to scroll to the first available memory location.


Or

 Enter the number of the memory location and press **OK**.

 Use the keypad to enter the telephone number you wish to store.

 Press the **OK** button to confirm.


To dial a number from the memory

- ▲ Press the **UP** or **DOWN** button to display the number you wish to dial.
-  Press the **GREEN PHONE** button to dial the number.

To edit and delete memory numbers


▲ Press the **UP** or **DOWN** button to enter the memory number you wish to change.

Or

 Enter the number of the memory location and press **OK**.

 Press **OK** to confirm.

 Press the **C** button to clear and back space the numbers.

 Edit the entries using the number on the keypad.

 Press **OK** to confirm.

Name and number directory

You can store up to 50 of your most frequently used names and numbers.

To store a name and number in the directory

▼ Press the **DOWN** button until **Directory** is displayed.



Press **OK** to confirm.



▼ Use **DOWN** button to scroll to **New**.



Press **OK** to confirm.

ABC

Enter the name using the letters on the keypad.

Entering names

Use the keypad letters to enter names by using a long press of the button, i.e. if you press and hold the **2** button the following characters appear, T, U, V, t, u, v. For example, if you wish to store the name **TOM**:



To enter the letter **T**, press **8** and hold the cursor will automatically move to the right and display the next chosen letter.



To enter **O**, press **6** and hold.



To enter the **M**, press **6** and hold.



If you enter a digit incorrectly you can delete it by pressing the **C** button.



Press **OK** to confirm.



Enter the telephone number you want to store.



Press **OK** to confirm.

To dial a number from the directory



Press the **DOWN** button to select the **Directory**.



Press **OK** to confirm.



Use the **UP** or **DOWN** button to scroll to **Find**.



Press **OK** to confirm.



Use the **UP** or **DOWN** button to find the entry you want to dial.



Press the **GREEN PHONE** button to dial the number.

To edit and delete directory numbers



Press the **DOWN** button to select **Directory**.



Press **OK** to confirm.



Use the **UP** or **DOWN** button to scroll to **Edit**.



Press **OK** to confirm.



Use the **UP** or **DOWN** button to find the entry you want to amend.



Press **OK** to confirm.



Use the **C** button to delete numbers or letters.



Edit the entry using the numbers/letters on the keypad.



Press the **OK** button to store the new entry. The display will then show **Done**.

Internal calls

If you have multiple handsets registered to a base you can make internal calls between handsets.

To make an internal call to another handset

Intercom



Press the **INTERCOM** button.



Enter the number of the handset you want to call.

Or



Enter ***** if you want to call all the handsets



Press the **RED PHONE** button to end the call.

To make an internal call to another handset



Press the number of the handset you wish to dial i.e **1, 2, 3, 4, 5, 6**.

Or



If you wish to call all handsets press *****



Press the **GREEN PHONE** button.



Press the **RED PHONE** button to end the call.

Transferring calls

You can transfer an external call to another handset registered to the base.

To transfer an external call between handsets

While on an external call:

Intercom



Press the **INTERCOM** button (you will hear a beep).



Enter the number of the handset to which you want to transfer the call.

If you wish you can talk to the other handset user first.



Press the **RED PHONE** button to transfer the call.

To transfer an external call between handsets

While on an external call:

OK



Press the **OK** button and Call hold 1 will be displayed.



Enter the number of the handset to which you want to transfer the call.



Press the **GREEN PHONE** button, then press the **RED PHONE** button. The call will be transferred. You can still talk on transfer if you want to.





Handset settings

Keypad beeps and tones





You can set your handset to beep or play a tone when you press a button on the keypad.

The BT On-Air Classic will come already set to ON.






Keypad beeps and tones volume

-  Press the **OK** button.
-  Press the **5** button.
-  Use the **UP** and **DOWN** buttons.
-  Press **OK** to confirm the setting.

Ringer volume

-  Press the **OK** button.
-  Press the **2** button.
-  Use the **UP** and **DOWN** buttons to select the volume you require.
-  Press **OK** to confirm.





Silent ring

-  Press the **OK** button.
-  Press the **1** button.
-  Use the **UP** or **DOWN** button to select **1** for ringer active or **2** for silent ring.
- The display will show the  symbol to indicate a silent ring.
-  Press **OK** to confirm.





Note

The time is also automatically updated from the information provided by the network during an incoming call with caller display.

Ringer melody










-  Press the **OK** button.
-  Press the **3** button.
-  Use the **UP** or **DOWN** button to select the melody you require.
-  Press **OK** to confirm.

To view the date and time

-  Press the **INTERCOM** button.
-  Press the **OK** button.
-  Press the **1** button twice. The date will be displayed.
-  Press the **OK** button the time is displayed.

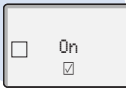Keypad







To switch keypad on

-  Press the **UP** or **DOWN** button to display **Set**.
-  Press **OK** to confirm.
-  Press the **UP** or **DOWN** button to display **Keypad**.
-  Press **OK** to confirm.
- The display shows 
-  Press the  button until the  appears in the box next to **On**.
-  Press **OK** to confirm.

 
Note



If the keypad is active, the emergency numbers 999, 112 can still be dialled.

To switch keyguard off

-  Press the **STAR** button.
-  Press **OK** to confirm.
-  Press the **UP** or **DOWN** button to display **Set**.
-  Press **OK** to confirm.
-  Press the **UP** or **DOWN** button to display **Keyboard**.
-  Press **OK** to confirm.

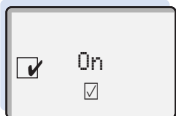


The display shows



-  Press the **←** button until the ✓ is removed from the **On** box.
-  Press **OK** to confirm.

To use your handset when the keyguard is on







This temporarily switches off the keyguard allowing you to make a call. The keyguard will then re-activate after one minute.

-  Press the **STAR** button.
-  Press **OK** to confirm.
-  If you receive an incoming call whilst the keyguard is on just press the **GREEN PHONE** button.

Economy mode

This feature enables you to extend the life of the battery by automatically switching the screen off if the phone has not been used for 30 seconds.




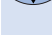 
-  Press the **UP** or **DOWN** button to enter the **Set** menu.

-  Press **OK** to confirm.
-  Press the **UP** or **DOWN** button to scroll to **Economy mode**.
-  Press **OK** to confirm.
-  Press the **←** button.
-  Press **OK** to confirm.
-  To re-activate the screen press the **GREEN PHONE** button.


Keypad beeps and tones volume

You can set your handset to beep or play a tone when you press a button on the keypad.

 
The BT On-Air Executive Plus will come already set to ON.

-  Press the **DOWN** button to enter the **Ringings and beeps** menu.
-  Press **OK** to confirm.
-  Use the **UP** button to scroll to **Beeps**.
-  Press **OK** to confirm.

The display will show either **Keypad** or **Battery low**.

-  Use the **UP** or **DOWN** button to highlight the one you wish to select then press the **OK** button to confirm.

The display will show

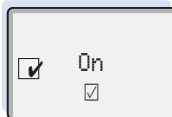

-  Press the **←** button to turn **ON** or **OFF**.
-  Press **OK** to confirm.

The display will then show **Done**.

To adjust ringer melody and volume

Choose from 10 different handset ringer melodies. Useful to determine which handset is ringing when you are using multiple handsets.

▼ Press the **DOWN** button to enter the **Ringing and beeps** menu.

 Press **OK** to confirm.

▼ Use the **DOWN** button to scroll to **Ringing**.

 Press **OK** to confirm.

▼ Select **External/Internal** or **Alarm** as required.

 Press **OK** to confirm.

▼ Use the **DOWN** button to scroll through the **Melody** options.


 Press **OK** to confirm.

You will then be asked to select the volume level.

▼ Use the **DOWN** button to scroll through and select the level you require.

 Press **OK** to confirm.

The display will then show **Done**.

If you require, the ringer can be switched off all together. The display will show  symbol to remind you that the ringer is off.

Vibrate

To switch Vibrate on and off

You can set your BT On-Air Executive Plus handset to vibrate and ring or vibrate only when someone calls you.

▼ Press the **DOWN** button to enter the **Ringing and beeps** menu.

 Press **OK** to confirm.

▼ Use the **DOWN** button to scroll to **Vibrate**.

 Press **OK** to confirm.

You can choose from **Vibrate and ring**, **Vibrate then ring**, **Vibrate disabled** or **Vibrate only**.

 Press **OK** to confirm.

If you wish to switch the vibrate off, follow the instructions above and choose **Vibrate disabled**.

Alarm clock

You can use your handset as an alarm clock. You must set the time before the alarm will work. The alarm will ring daily until the setting is turned off.

To set the alarm

▼ Press the **DOWN** button to enter the **Ringing and beeps** menu.


 Press **OK** to confirm.

▼ Use the **DOWN** button to scroll to **Alarm**.

 Press **OK** to confirm.

Set will be highlighted.

 Press **OK** to confirm.

 
 Enter the time you want the alarm to go off at. (24 hour clock)




 Press **OK** to confirm.

▲ Use the **UP** or **DOWN** button to scroll to **Status**.

 Press **OK** to confirm.

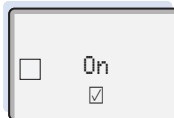The display shows




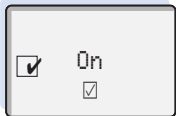






 Press the  button until the  appears in the box next to **On**.

 Press **OK** to confirm.

When the alarm is set  is displayed.




To turn the alarm off

- ▼ Press the **DOWN** button to enter the **Rings and beeps** menu.
 -  Press **OK** to confirm.
 - ▼ Use the **DOWN** button to scroll to **Alarm**.
 -  Press **OK** to confirm.
 - ▼ Use the **DOWN** button to select **Status**.
 -  Press **OK** to confirm.
- The display shows
- 
- 
-  Press the  button until the ✓ is removed from the **On** box.
 -  Press **OK** to confirm.














Handsfree

Handsfree allows you to talk to your caller without holding the handset.

To use handsfree

- During a call you can switch to handsfree mode.
-  Whilst on a call press the **GREEN PHONE** button.
- When handsfree is active you see the  symbol flashing.
-  To switch handsfree off, press the **GREEN PHONE** button again.

Timer

- ▼ You can use your handset to set a reminder alarm which will activate after a period of time of your choice.
 - ▼ Press the **DOWN** button to select **Rings and beeps**.
 -  Press **OK**.
 -  Press the **UP** button to select **Timer**.
 -  Press **OK**.
 -  Press **OK** again to select **Set**.
 - Using 4 digits, enter the time in 24 hour clock format to elapse before your reminder call activates.
 -  Press **OK** to save.
 - ▼ Press the **DOWN** button to select **Status**.
 -  Press **OK**.
 -  Press the  button until a ✓ appears in the box next to **On**.
 -  Press **OK** to confirm.
 -  To switch off the timer press the  button until the ✓ disappears from the box next to **On**.
 -  Press **OK** to confirm.
- When the timer is set  is displayed.

General information for your handset

Guarantee

Your BT On-Air 1000 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT On-Air 1000, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is provided.
- The equipment is returned to BT or its agent as instructed.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

Within the 12-month guarantee period:

If you experience a problem with your product you should contact the Helpline on **0845 6012476**. Calls are charged at local call rates. If the problem is not remedied, you will be advised to return your product to the helpline.

Helpline

*If you are experiencing difficulty, please call the BT On-Air Helpline on **0845 6012476**.*

Outside the 12-month guarantee period:

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you call the Helpline on **0845 6012476** and ask for details of our recommended repair agents.

If you have to return your product:

If the helpline are unable to remedy your problem they will ask you to return the product. Pack the base station and handset securely, preferably in the original packaging. All parts must be returned, including line cords, power supplies and original batteries. (Please note that we can not take responsibility for goods damaged in transit). Use the self adhesive Freepost label to post your product.

If you have lost the label please call the helpline for instructions.

Keep proof of posting

Make sure the Post Office give you proof of posting.

Technical information

Only use approved power supply item code: 872101.

Only use approved batteries item code: 872102.

RTTE

This apparatus was designed in compliance with European Council decision Number 98/482/EC relative to pan-European connection in view to its connection on the Public Switched Telephone Network (PSTN). It is in conformity with Standards TBR21, TBR38(*) ETSI 201 121.

(*) Terminals integrating an analogue handset function.

If problems arise, your supplier should be contacted first.

The EC marking attests product conformity with the essential requirements in compliance with Directives 73/23/EC for User Safety, 89/336/EC for Electromagnetic perturbations and 98/13/EC for Telecommunication network access.

The manufacturer declares that the products have been manufactured in conformity with Annex III of RTTE Directive 99/05/EC.

Switchboard compatibility

Generally this telephone may be connected to switchboards which support tone signalling and timed break recall. In the event of any difficulties please consult your switchboard service provider.

Switchboard External Line Access Code

When you connect your telephone to a switchboard, you can set the switchboard's external line access code so that when you make an external call using the handset directory or redial list the code is automatically dialled before the number. See main user guide for details.

Index

Alarm clock	18	Make a call	11
Batteries		Name and number directory	14
charge	5	Number memory	13
install	5	On/Off	
low warning	5	power	11
performance	5	secrecy	12
Call timer	11	Power supply	5
Calls		Redial	
end	11	copy	12
internal	15	delete	12
make	11	list	12
receive	11	Registering	
transfer	15	classic handsets	7
Cleaning	4	executive handsets	7
Date – view	16	fax machine	9
Delete		Returning your product	20
redial list	12	Ringer melody	16, 18
De-Register		Safety information	4
classic handset	7	Secrecy	12
executive handset	8	Setting up	5
Economy mode	17	Silent ring	16
Fax machine		Switchboard use	21
registering	9	Technical information	21
General information	20	Time – view	16
Guarantee	20	Timer	19
Handsfree	19	Transferring calls	15
Headset	6	Vibrate	18
Helpline	5	Volume	
Internal calls	15	beeps	16, 17
Keyguard	16	earpiece	11
		ringer melody	16, 18
		ringer volume	16



Offices Worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

Touchtone[™] is a registered trade mark of British Telecommunications plc in the UK.

© British Telecommunications plc 2000.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.
Designed by: The Art & Design Partnership Limited.
Printed in Europe. On-Air 1000 Classic/Executive Plus. Issue 1 (11/00) 2

Printed on paper which meets international environmental standards.

