

Installation guide

FAX


Dear Customer,

With the help of this guide you can install your fax machine quickly and easily. After you have finished the installation press the **i** key for two seconds. Your machine will then guide you through the main settings as well as the adjustment to your telephone line.

1 Telephone handset

To connect the handset, turn your machine upside down. Connect the handset with the spiral cable to the fax machine.

Connect the handset to the spiral cable.

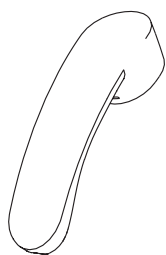


Insert the other end of the spiral cable into the socket identified with a handset symbol.


The sockets for the handset cable and the telephone cable are on the bottom of the fax machine.

2 Telephone connection

The socket for the telephone cable is on the bottom of the fax machine. The small plug of the telephone cable has to be connected to your fax machine, the big plug to the line socket on the wall.

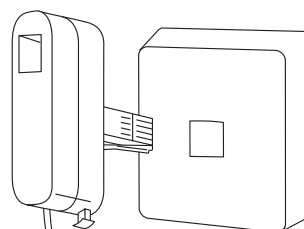

Connect the telephone plug to the line socket on the wall.

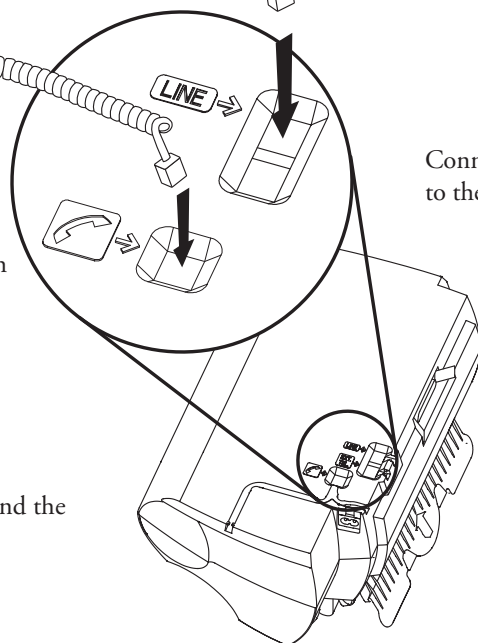

Connect the small plug of the telephone cable to the socket identified with **LINE**.

Let's make things better.




PHILIPS

Additional devices


You can connect additional devices (telephones, cordless telephones, answering device, PC modem) to your telephone line.

To the same socket

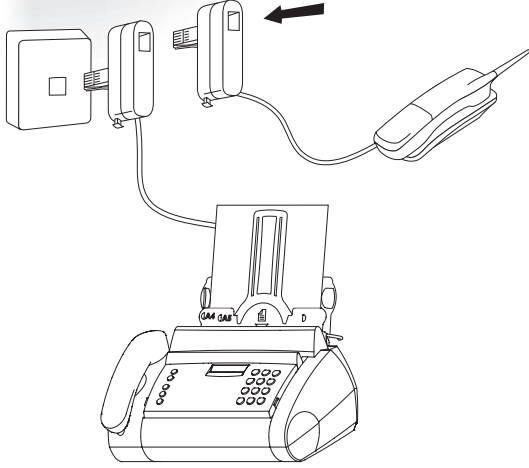

You can connect additional devices (e.g. telephones or cordless phones) to the same telephone socket. If connected in this way, your fax machine functions ideally together with additional devices.


To separate sockets

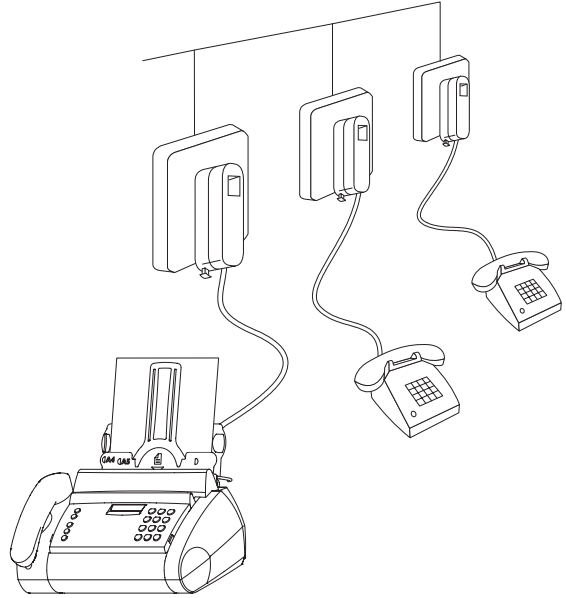

You can also connect additional devices to separate sockets on the same line, even if they are in different rooms. If connected in this way, your fax machine cannot fully control the additional devices.


Power supply

4

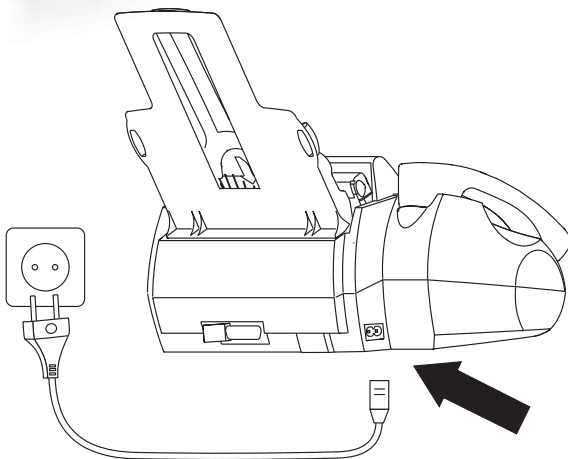


Loading paper

5

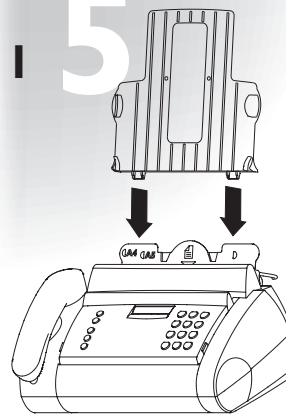


Insert the paper tray in the slots provided behind the paper feed mechanism.

2

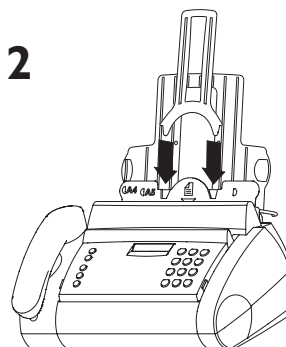

Stick the document support insertion in the openings provided on the paper feed flap.

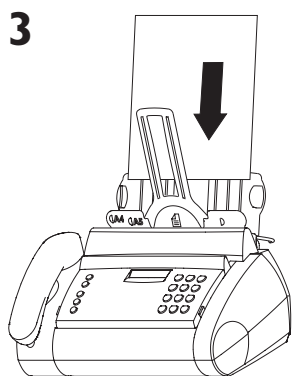


- 3** Pull the paper feed flap forwards until it stops. Insert a maximum of **50 sheets of A4 paper** (210 x 297mm 80 g/m²). Then close the flap again.


Inserting a cartridge

6

- 1** Open the operation panel by lifting it at the sides by the grip recesses.

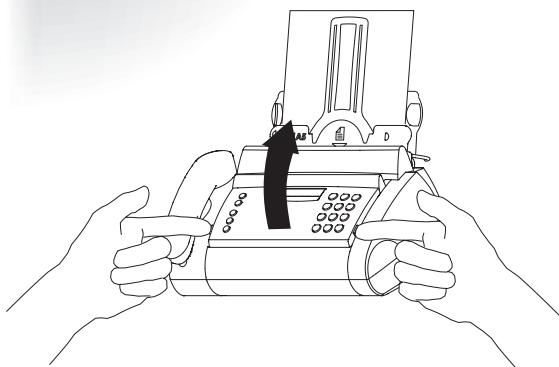


- 2** Take the ink cartridge out of its packaging and pull off the protective strip.

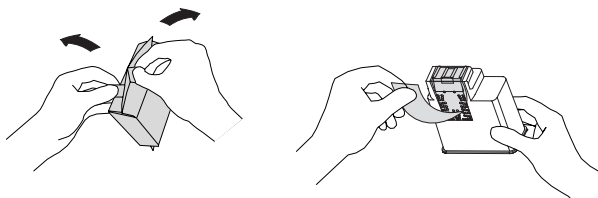

! Be careful not to touch the nozzles and the contacts.

- 3** Insert the cartridge with the coloured end forwards and the contacts downwards into the holder. If it has been inserted correctly, you will hear a click and the rod in the centre snaps home. Close the operation panel.

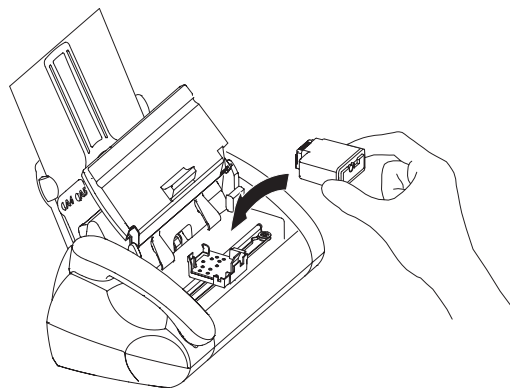

Starting up

To finish the installation process you have to go through some main settings (e.g. adaption of your fax to the telephone line). Using **EASY INSTALL** your fax machine will be configured according to your local conditions.

- 1** Press **i** for at least two seconds. Your fax machine will print one page. Follow the instructions on it.
- 2** Your fax machine will then guide you on the display through the first settings, such as your telephone number and your name.
- 3** After that it will prompt you to enter the current time and date. Use the dial pad to enter the correct time (e.g. **0915** for 9:15).
- 4** Enter the correct day, month and year. To conclude press **OK** (e.g. **150502** **OK** for 15th May 2002).

Customer information

Should you require technical assistance while using your fax machine, please contact our Call Centre. To ensure that you receive the maximum service for your new purchase, and as part of your one-year guarantee, we can also offer you an on-site exchange service. Our **Call Centre** hours are shown below and the on-site exchange service is available Monday to Friday.

Call Centre hours: Monday to Friday: 8:00 a.m. - 5:00 p.m.
Saturday: 9:00 a.m. - 6:00 p.m.
Closed Sunday and National Holidays

Phone: 0870-900 90 70
Fax: 020-8784 1406

e-mail: fax.infoline@philips.com
Internet: www.fax.philips.com

Please note that inkfilm, which has a limited capacity of pages, has been installed in your machine. You can order cartridges directly (free delivery) on Freefone 0800 358 0807 or via our Internet site. Please be aware that only Philips inkfilms should be used. Your Philips guarantee does not cover damage to your fax machine that may be caused by use of any other cartridges.

We hope you enjoy using your new Philips fax machine!

With kind regards,

Your Philips Fax Team

Please be aware that your machine has been manufactured to comply with UK network specifications and can therefore only be used in the UK.

Please note that all information is subject to change without notice.

Copyright ©2001 Philips